


The place of the temperature and humidity sensors in connection with wall-mounted heaters

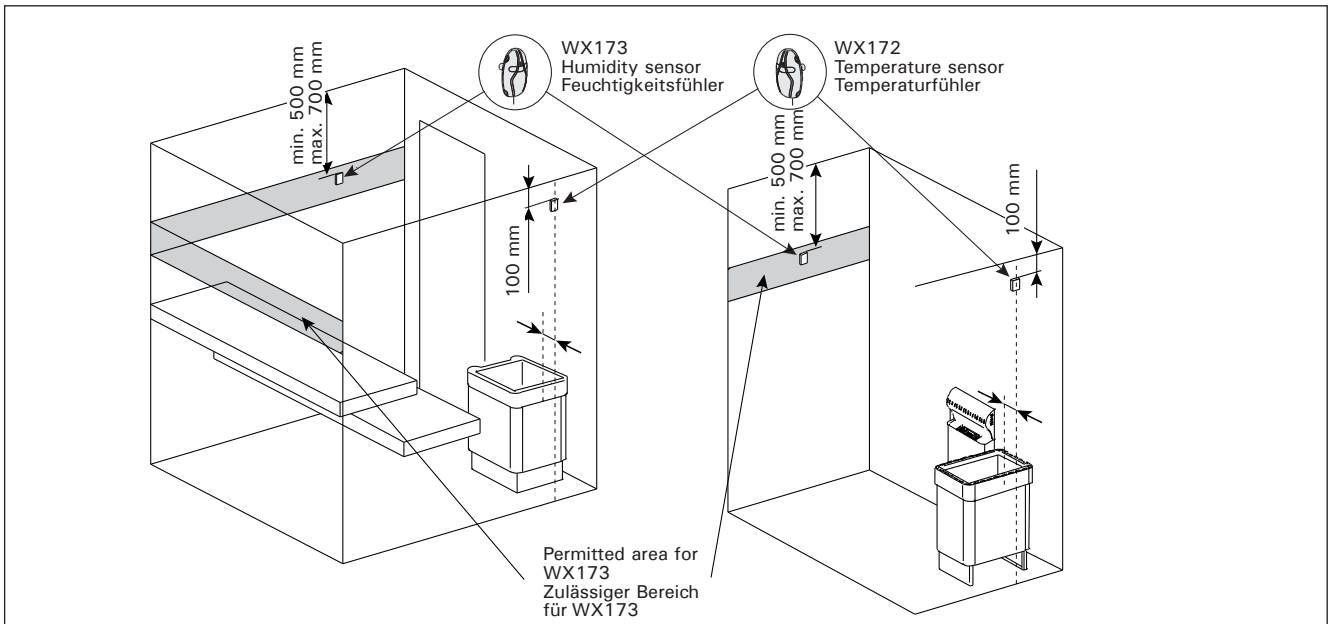

The place of the temperature and humidity sensors in connection with floor-mounted heaters