


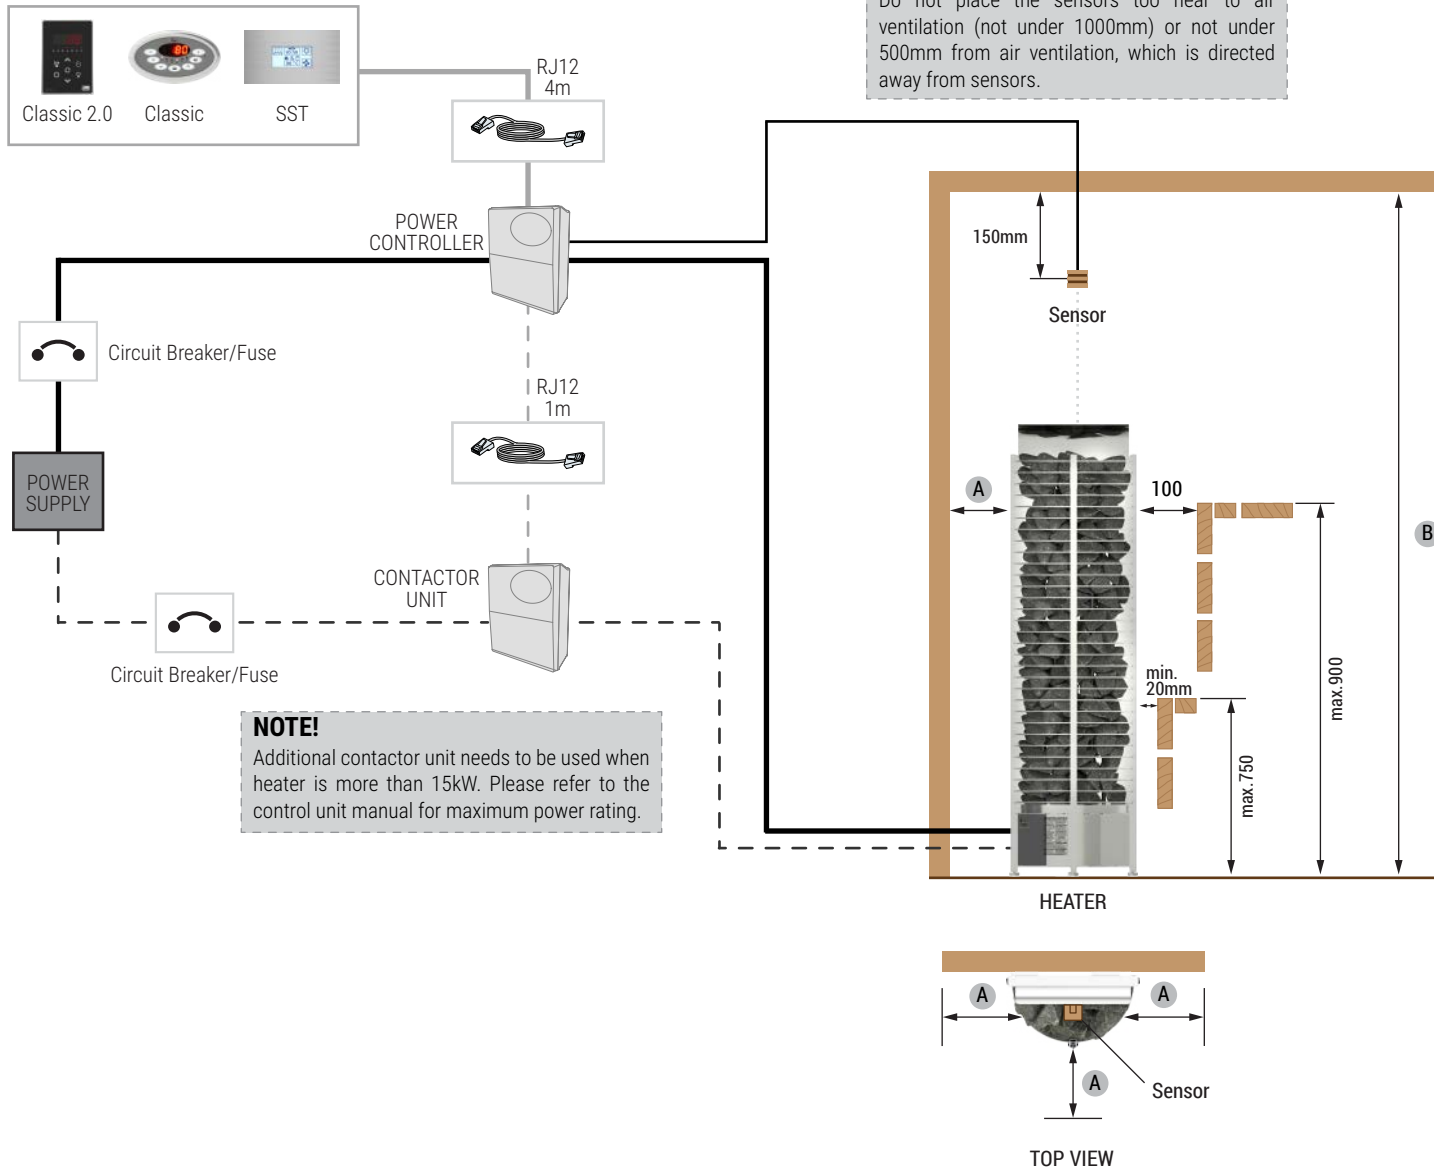

TOWER WALL HEATER- Installation Diagram for Separate Control (NS)




Minimum Safety Distances

Heater Model	A	B
TH2-30NS-WL	100	1900
TH3-35NS-WL	100	1900
TH3-45NS-WL	100	1900
TH3-60NS-WL	100	1900
TH4-60NS-WL	100	1900
TH5-80NS-WL	100	1900
TH5-90NS-WL	100	1900
TH6-80NS-WL	100	1900
TH6-90NS-WL	100	1900
TH6-105NS-WL	100	2100
TH6-120NS-WL	100	2100
TH9-105NS-WL	100	2100
TH9-120NS-WL	100	2100
TH9-150NS-WL	100	2100
TH9-180NS-WL	100	2300
TH12-150NS-WL	100	2300
TH12-180NS-WL	100	2300
TH12-210NS-WL	100	2300
TH12-240NS-WL	100	2300



TOWER WALL HEATER- Installation Diagram for Innova Separate Control (Ni)


NOTE!
Do not place the sensors too near to air ventilation (not under 1000mm) or not under 500mm from air ventilation, which is directed away from sensors.

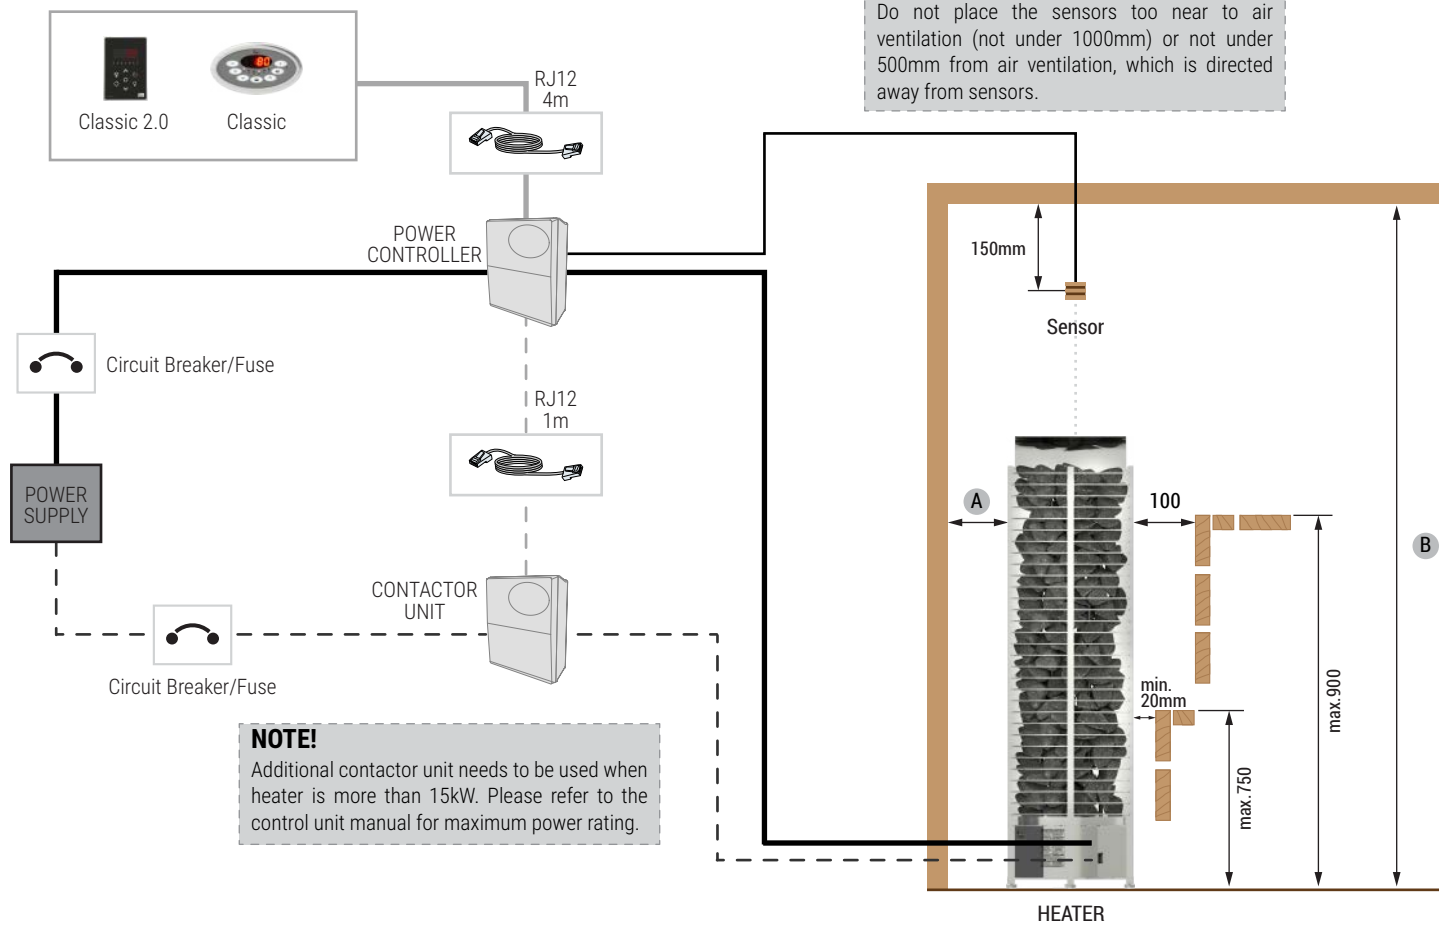

NOTE!
Additional contactor unit needs to be used when heater is more than 15kW. Please refer to the control unit manual for maximum power rating.

Minimum Safety Distances

Heater Model	A	B
TH6-80Ni-WL	100	1900
TH6-90Ni-WL	100	1900
TH6-105Ni-WL	100	2100
TH6-120Ni-WL	100	2100
TH9-105Ni-WL	100	2100
TH9-120Ni-WL	100	2100
TH9-150Ni-WL	100	2100
TH9-180Ni-WL	100	2300
TH12-150Ni-WL	100	2300
TH12-180Ni-WL	100	2300
TH12-210Ni-WL	100	2300
TH12-240Ni-WL	100	2300

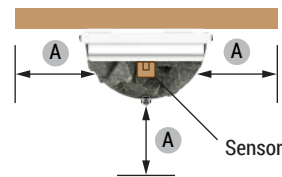


TOP VIEW




TOWER WALL HEATER- Installation Diagram for Saunova 2.0 Control (Ni2)

NOTE!
Do not place the sensors too near to air ventilation (not under 1000mm) or not under 500mm from air ventilation, which is directed away from sensors.

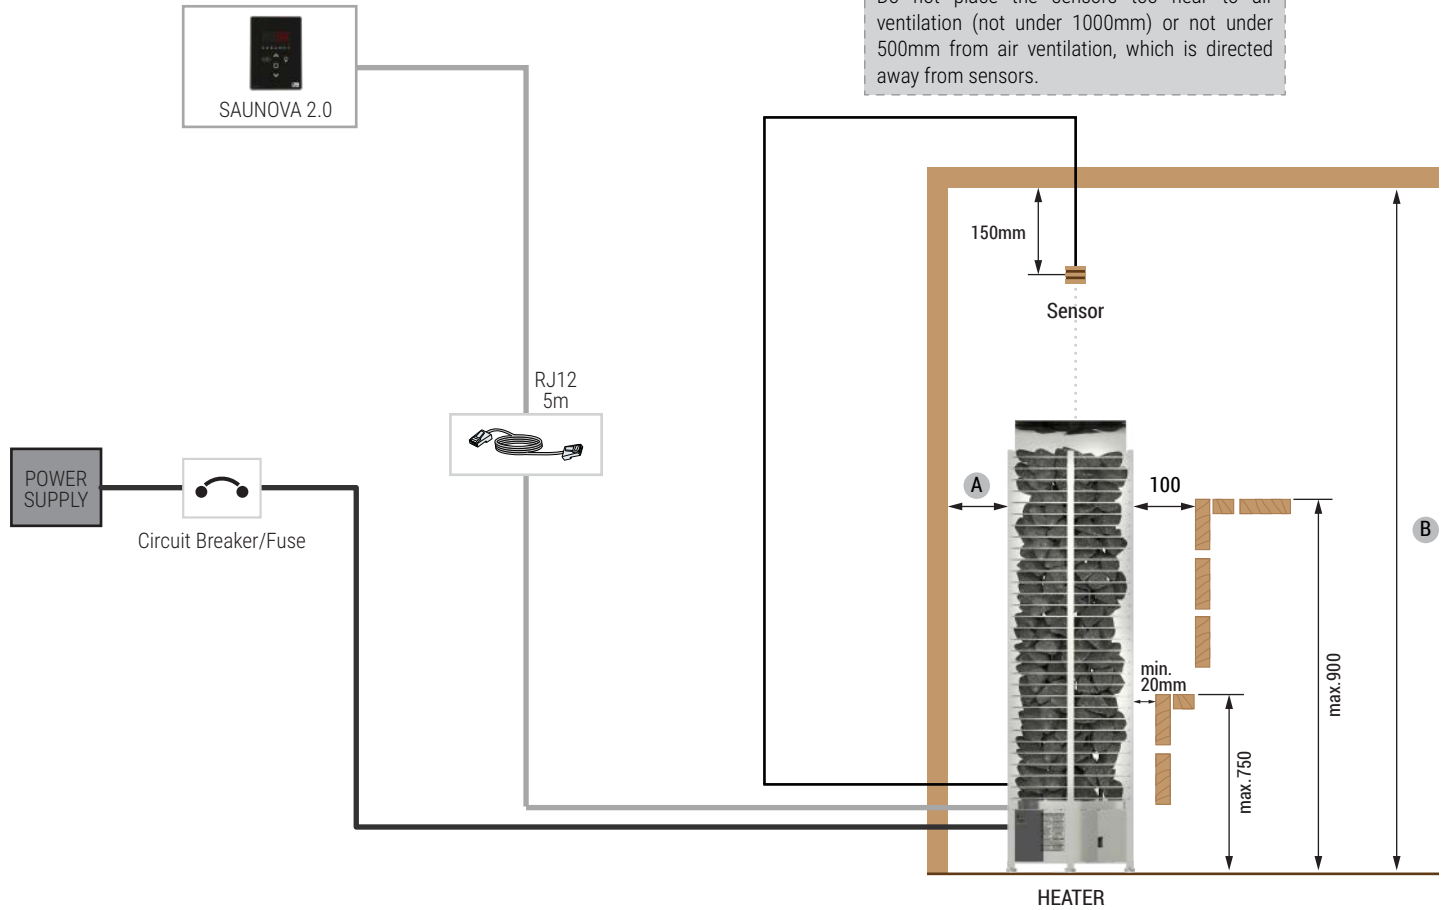

Minimum Safety Distances


Heater Model	A	B
TH2-30Ni2-WL	150	1900
TH3-35Ni2-WL	100	1900
TH3-45Ni2-WL	100	1900
TH3-60Ni2-WL	150	1900
TH4-60Ni2-WL	150	1900
TH5-80Ni2-WL	150	1900
TH5-90Ni2-WL	150	1900
TH6-80Ni2-WL	150	1900
TH6-90Ni2-WL	150	1900

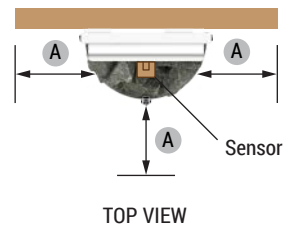

TOP VIEW



TOWER WALL HEATER- Installation Diagram for Built-in Control (NB)

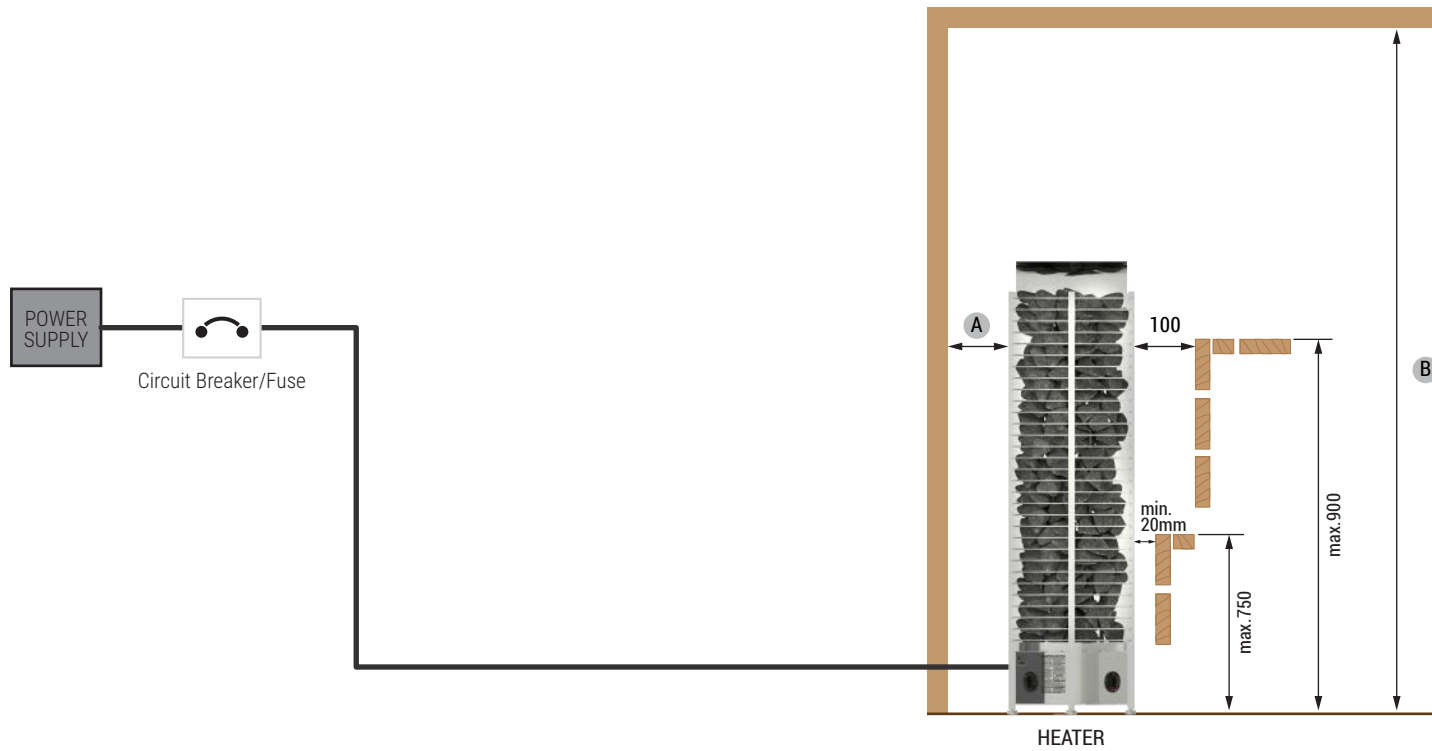

Minimum Safety Distances

Heater Model	A	B
TH2-30NB-WL	100	1900
TH3-35NB-WL	100	1900
TH3-45NB-WL	100	1900
TH3-60NB-WL	100	1900
TH4-60NB-WL	100	1900
TH5-80NB-WL	100	1900
TH6-80NB-WL	100	1900
TH6-90NB-WL	100	1900

