
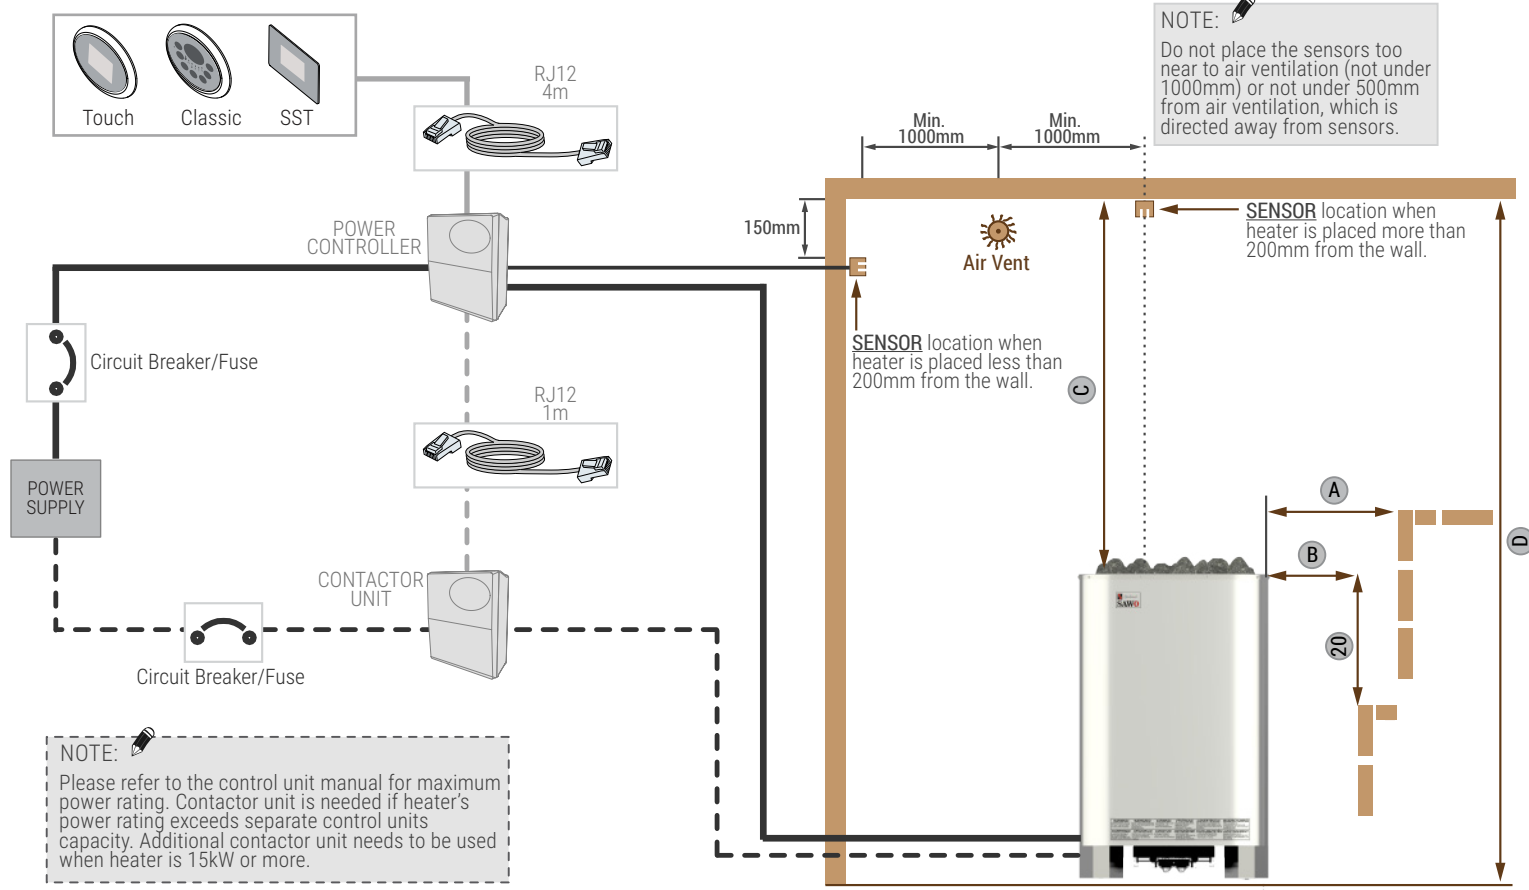


## SAVONIA HEATER- Installation Diagram for Separate Control (NS)

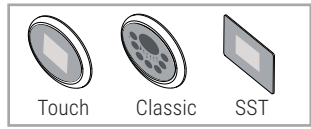

**NOTE:**  
Do not place the sensors too near to air ventilation (not under 1000mm) or not under 500mm from air ventilation, which is directed away from sensors.

**NOTE:**  
Please refer to the control unit manual for maximum power rating. Contactor unit is needed if heater's power rating exceeds separate control units capacity. Additional contactor unit needs to be used when heater is 15kW or more.

### Minimum Safety Distances

	A	B	C	D
SAV-90N	110	50	1200	1900
SAV-105N	120	60	1200	1900
SAV-120N	130	70	1400	2100
SAV-150N	160	100	1400	2100
SAV-180N	160	100	1400	2100
SAV-180NV12	160	100	1400	2100
SAV-210NV12	160	100	1400	2100
SAV-240NV12	160	100	1400	2100

