


CUMULUS HEATER- Installation Diagram for Separate Control

NOTE:
Do not place the sensors too near to air ventilation (not under 1000mm) or not under 500mm from air ventilation, which is directed away from sensors.

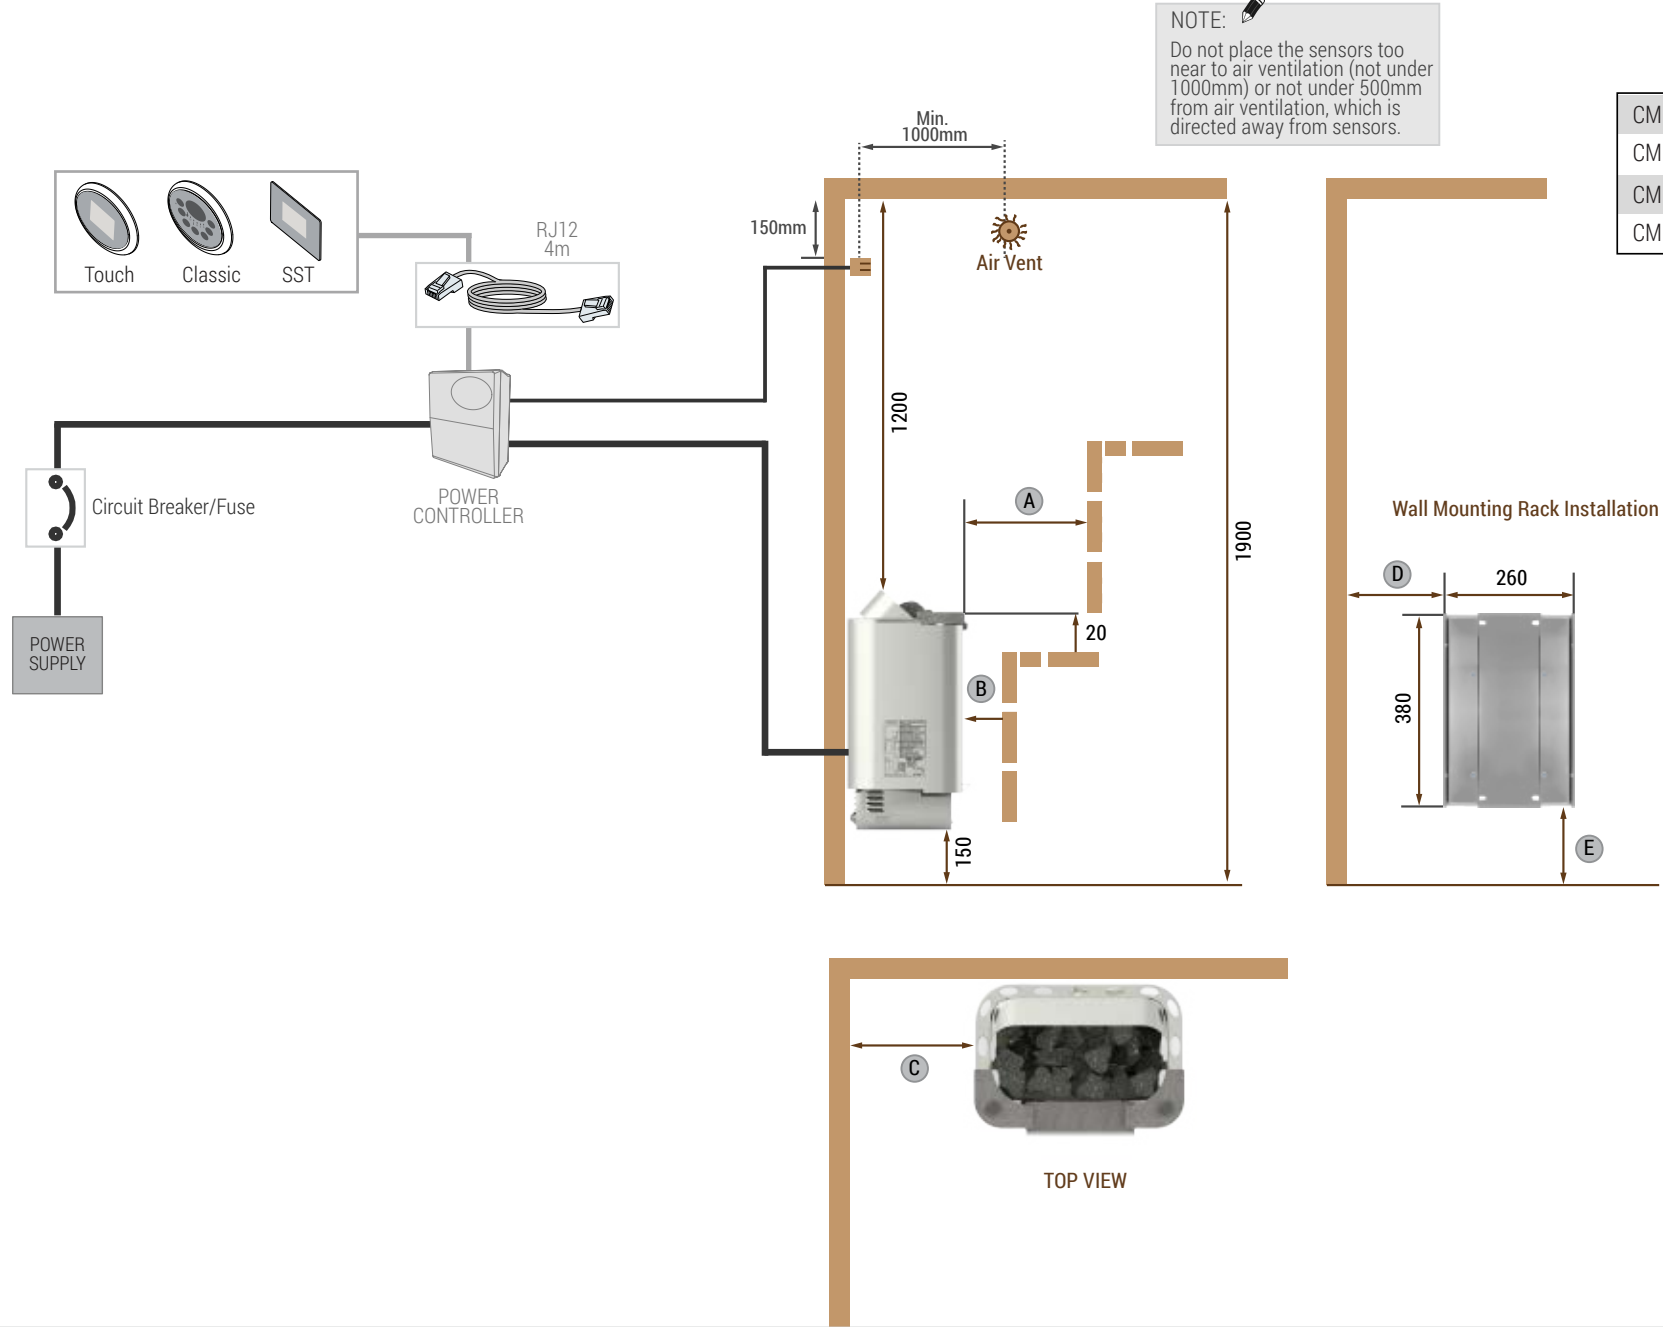

Minimum Safety Distances

	A	B	C	D	E
CML-45NS	50	20	50	130	245
CML-60NS	50	20	50	130	245
CML-80NS	60	30	60	140	330
CML-90NS	60	30	60	140	330

TOP VIEW

CUMULUS HEATER- Installation Diagram for Built-in Control

Minimum Safety Distances

	A	B	C	D	E
CML-45NB	50	20	50	130	245
CML-60NB	50	20	50	130	245
CML-80NB	60	30	60	140	330
CML-90NB	60	30	60	140	330

